



U.S. PIPE® VALVE & HYDRANT M-94

Fire Hydrant Parts List

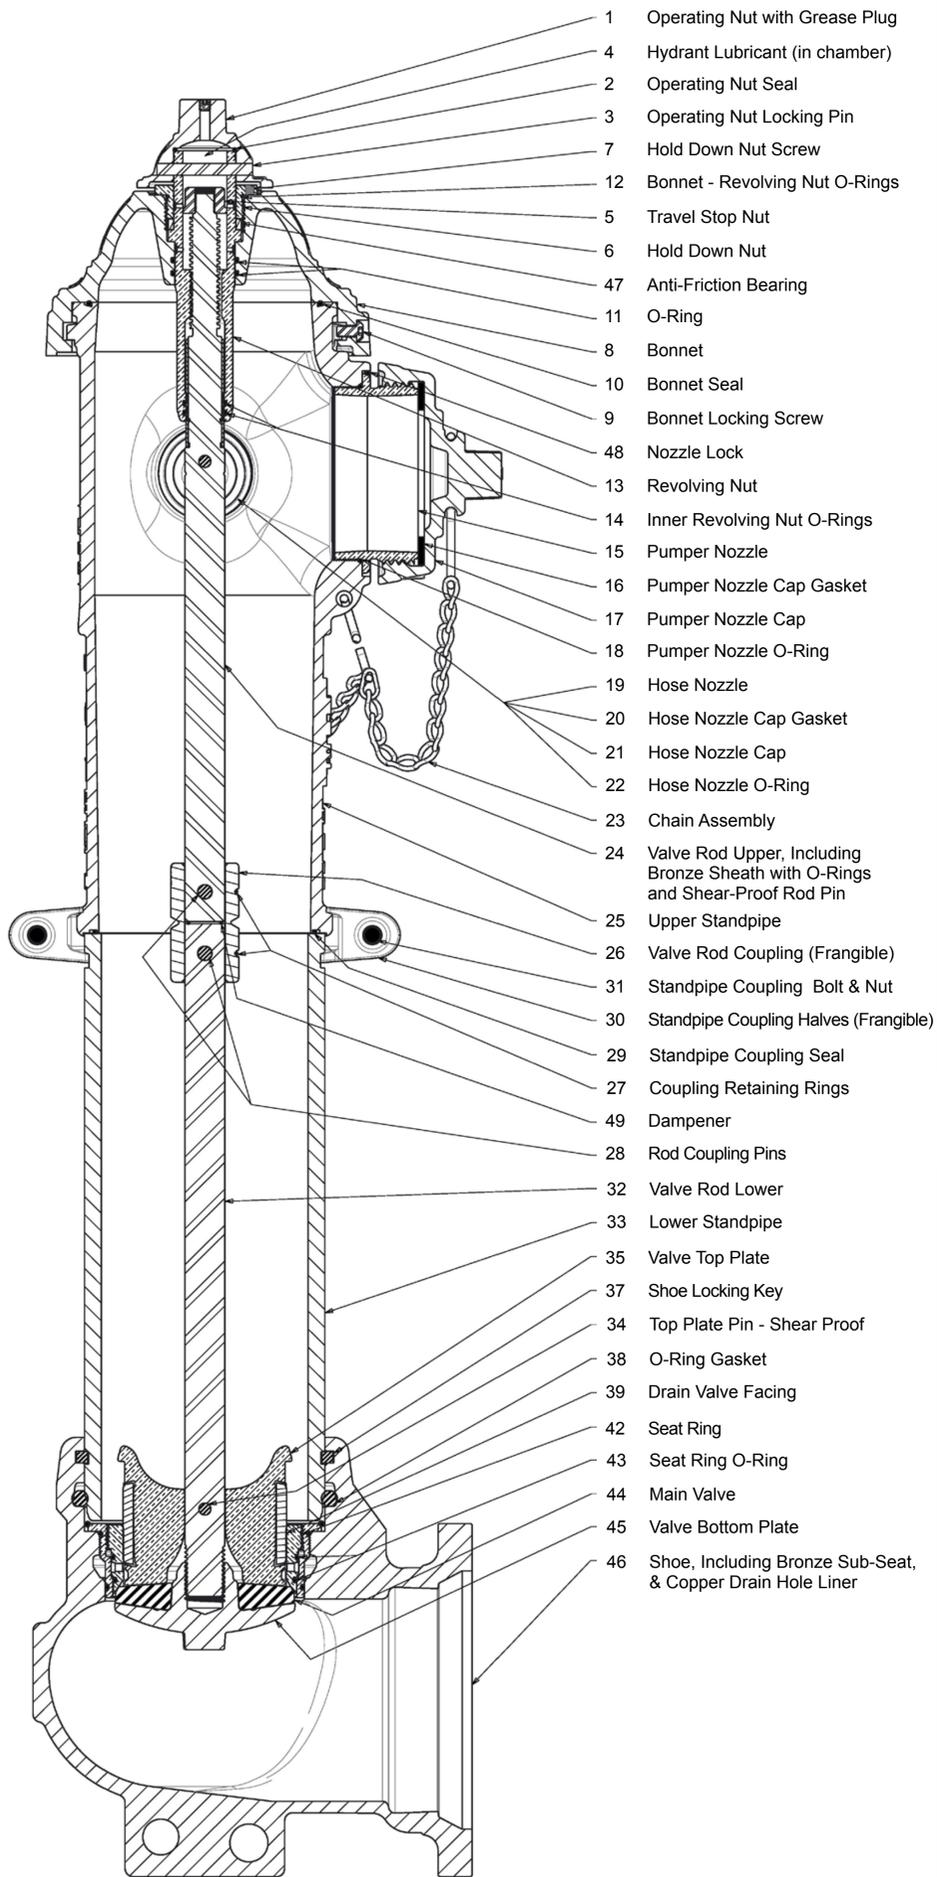

- 1 Operating Nut with Grease Plug
- 4 Hydrant Lubricant (in chamber)
- 2 Operating Nut Seal
- 3 Operating Nut Locking Pin
- 7 Hold Down Nut Screw
- 12 Bonnet - Revolving Nut O-Rings
- 5 Travel Stop Nut
- 6 Hold Down Nut
- 47 Anti-Friction Bearing
- 11 O-Ring
- 8 Bonnet
- 10 Bonnet Seal
- 9 Bonnet Locking Screw
- 48 Nozzle Lock
- 13 Revolving Nut
- 14 Inner Revolving Nut O-Rings
- 15 Pumper Nozzle
- 16 Pumper Nozzle Cap Gasket
- 17 Pumper Nozzle Cap
- 18 Pumper Nozzle O-Ring
- 19 Hose Nozzle
- 20 Hose Nozzle Cap Gasket
- 21 Hose Nozzle Cap
- 22 Hose Nozzle O-Ring
- 23 Chain Assembly
- 24 Valve Rod Upper, Including Bronze Sheath with O-Rings and Shear-Proof Rod Pin
- 25 Upper Standpipe
- 26 Valve Rod Coupling (Frangible)
- 31 Standpipe Coupling Bolt & Nut
- 30 Standpipe Coupling Halves (Frangible)
- 29 Standpipe Coupling Seal
- 27 Coupling Retaining Rings
- 49 Dampener
- 28 Rod Coupling Pins
- 32 Valve Rod Lower
- 33 Lower Standpipe
- 35 Valve Top Plate
- 37 Shoe Locking Key
- 34 Top Plate Pin - Shear Proof
- 38 O-Ring Gasket
- 39 Drain Valve Facing
- 42 Seat Ring
- 43 Seat Ring O-Ring
- 44 Main Valve
- 45 Valve Bottom Plate
- 46 Shoe, Including Bronze Sub-Seat, & Copper Drain Hole Liner

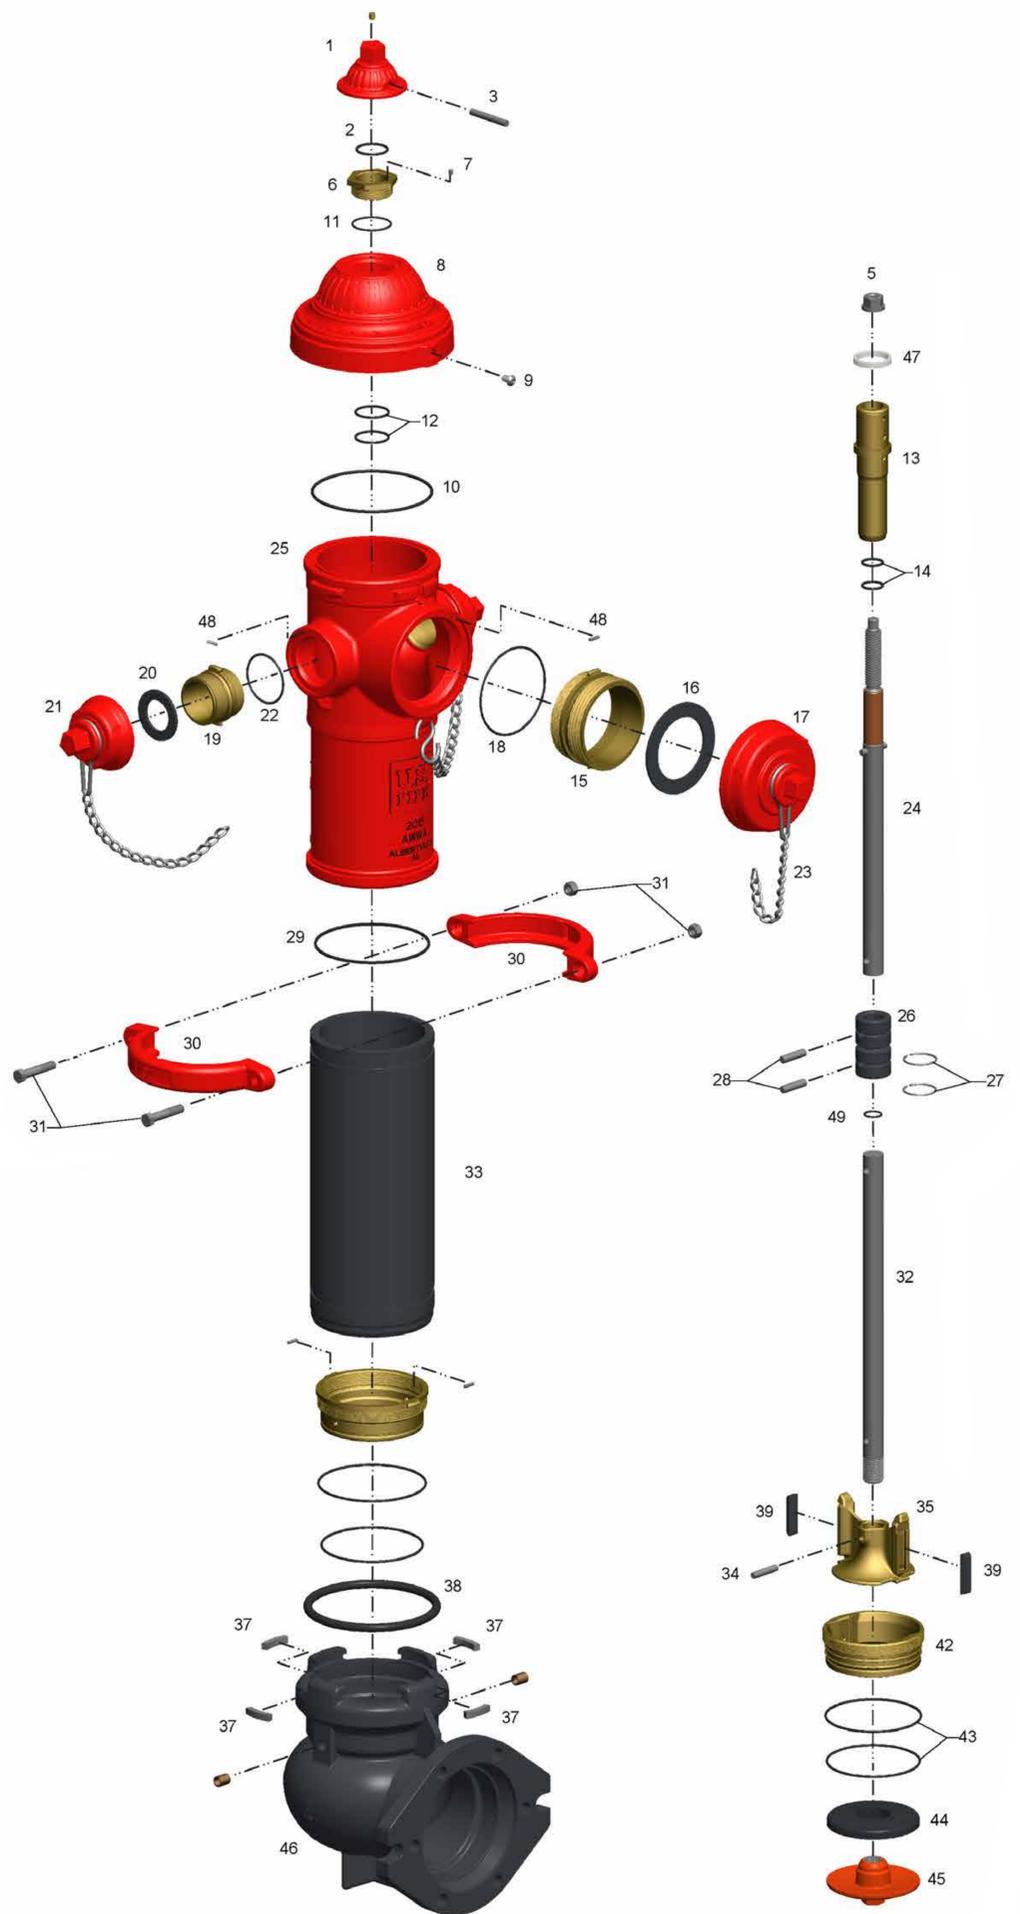

TO ORDER PARTS, SPECIFY THE FOLLOWING:

Quantity, part number and name, size and catalog number of hydrant, direction of opening, depth of bury, and date (year) cast on hydrant.

QR tags provide access to hydrant data and documentation.



VALVE & HYDRANT

U.S. Pipe Valve & Hydrant, LLC
500 West Eldorado Street
Decatur, IL 62525
www.uspvh.com

Toll Free: 1.800.871.2194
Canada: 1.705.719.9965
support@uspvh.com